



Specs: 26.04xSpecs20


Waterproofing a Concrete Slab to Prevent Efflorescence Staining Surface

Products required

- **MAXSEAL FLEX**
- **MaxMesh**

Method

1. Thoroughly clean the surface to remove any loose material.
2. Thoroughly wet down all surfaces, remove standing water.
3. Apply one coat of Maxseal Flex to corners and over joints.
4. Apply MaxMesh to first coat of Maxseal Flex, tamp mesh into first coat with some more of the Maxseal Flex. Coat the remaining surfaces with Maxseal Flex. Leave for 14 hours to cure out.
5. Dampen the surfaces, and keep damp, while applying a second coat of Maxseal Flex

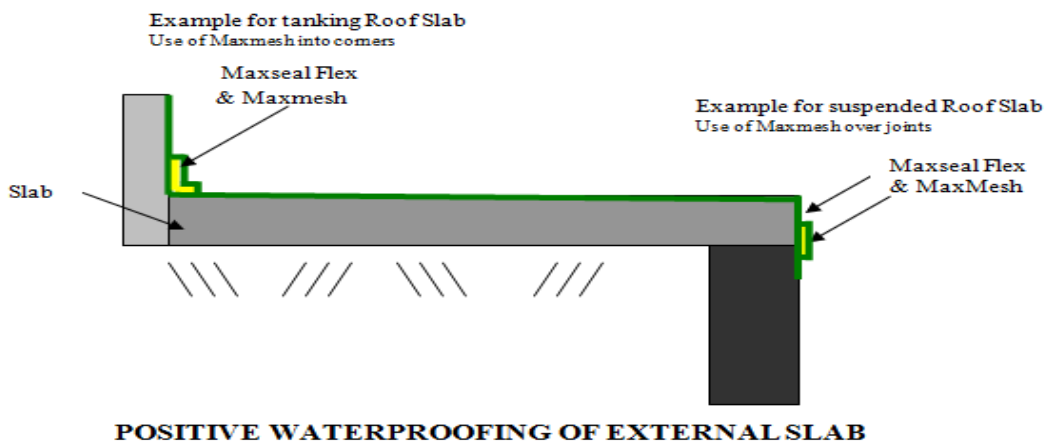

To Treat EFFLORESCENCE see 26.12Specs- Efflorescence

© Scientific Waterproofing Products Pty Ltd. ABN: 155 659 948 All rights reserved.

Address: Unit4/92 Bryant Street, Padstow, NSW 2211, AUSTRALIA

Tel: +61 2 9771 0011 Fax: +61 2 9771 0111

Email: admin@swppl.com.au National Hotline: 1300 303 301

National Faxline: 1300 369 932 <http://swppl.com.au/>

