



Specs: 26.13Specs20


Sealing Pipe Penetrations in Basements.

Products required

- **MAXPLUG**
- **MAXSEAL FLEX**
- **MAXGRIP**

Method

1. Cut around pipe penetration to open a channel minimum 20mm wide.
2. Fill up this newly created void with **MAXPLUG**.
3. Leave to cure for 5-10 minutes.
4. Coat the area around the penetration, the **MAXPLUG** and onto the pipe with **MAXSEAL FLEX** (2 coats) to prevent any water migration.
5. The **MAXSEAL FLEX** will adhere to all three surfaces.

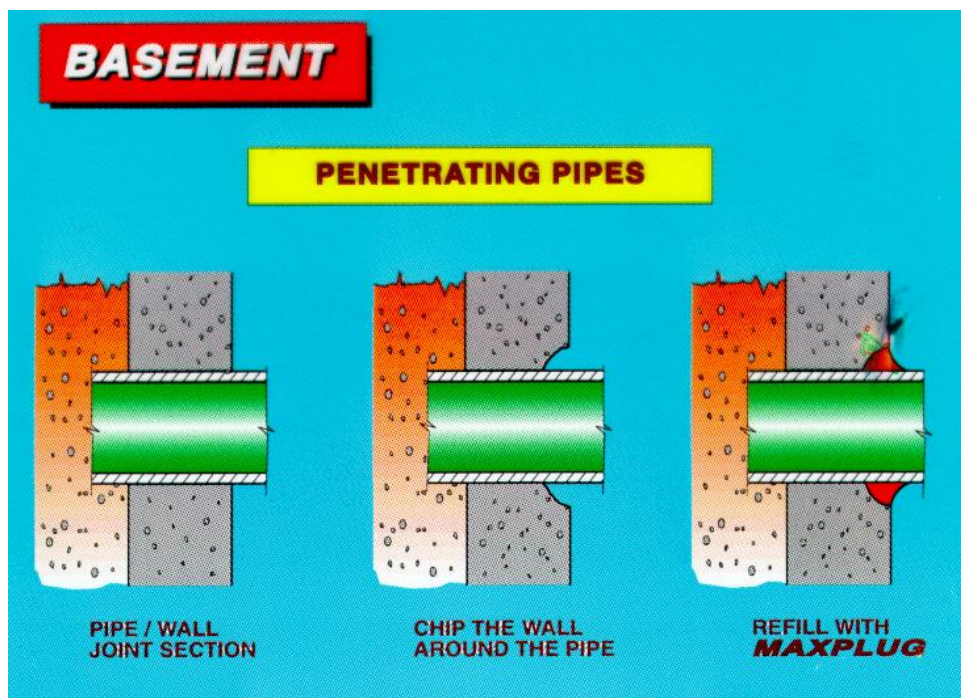

USE MAXGRIP IF THERE IS NO ACTIVE WATER FLOW

© Scientific Waterproofing Products Pty Ltd. ABN: 155 659 948 All rights reserved.

Address: Unit 4/92 Bryant Street, Padstow, NSW 2211, AUSTRALIA

Tel: +61 2 9771 0011 Fax: +61 2 9771 0111

Email: admin@swppl.com.au

National Hotline: 1300 303 301 National Faxline: 1300 369 932

<http://swppl.com.au/>