



# Specs: 26.18Specs20


## Sealing Expansion Joints with Flowing Water.

### Products required

- **MAXPLUG**
- **MAXJOINT ELASTIC**

### Method

1. Cut a channel at the expansion joint to a minimum of 60mm wide and deep.
2. Fill up this newly created void with **MAXPLUG** to stop the flowing water.
3. Leave to cure for 5-10 minutes.
4. Cut out new expansion joint before filling with **MAXJOINT ELASTIC**.

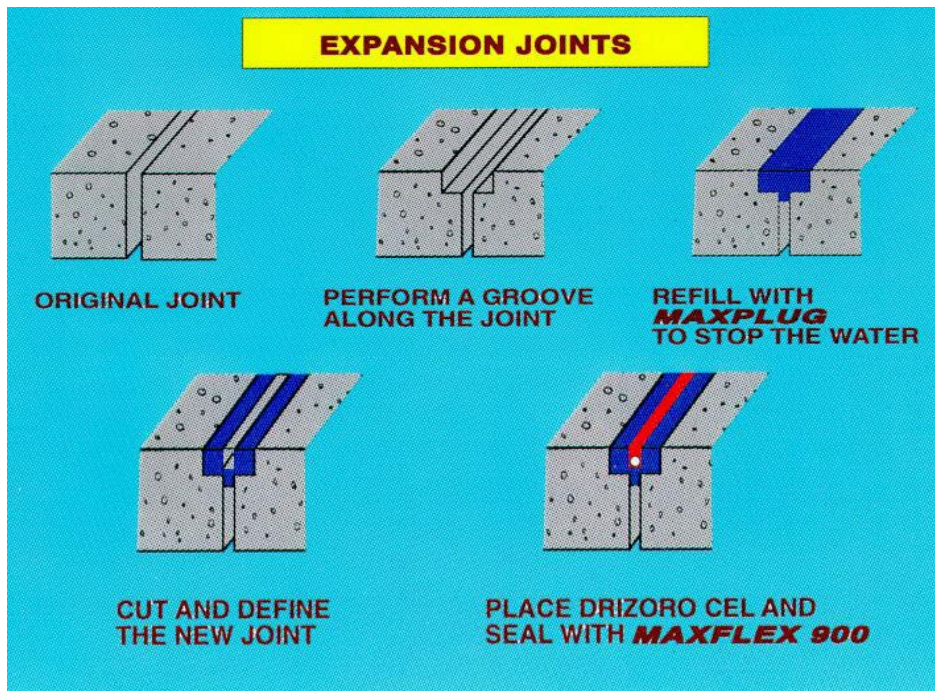

© Scientific Waterproofing Products Pty Ltd. ABN: 155 659 948 All rights reserved.

Address: Unit 4/92 Bryant Street, Padstow, NSW 2211, AUSTRALIA

Tel: +61 2 9771 0011 Fax: +61 2 9771 0111

Email: [admin@swppl.com.au](mailto:admin@swppl.com.au)

National Hotline: 1300 303 301 National Faxline: 1300 369 932

<http://swppl.com.au/>