



Specs: 26.20Specs20


Sealing Wall / Floor Joints.

Products required

- **MAXPLUG**
- **MAXSEAL FLEX**
- **MAXMESH**

Method

1. Cut a channel at the base of the wall minimum 30mm wide and deep.
2. Fill up this newly created void with **MAXPLUG**.
3. Leave to cure for 5-10 minutes.
4. Coat the area 1-2 course up the wall, the **MAXPLUG** and onto the concrete floor (150-200mm) with **MAXSEAL FLEX** (2 coats) to prevent any water migration.
5. The **MAXSEAL FLEX** will adhere to all three surfaces.
6. WET surface, APPLY **MAXSEAL FLEX**, install **MAXMESH**, allow to cure min. 14 hrs
7. WET surface, APPLY second coat **MAXSEAL FLEX** .

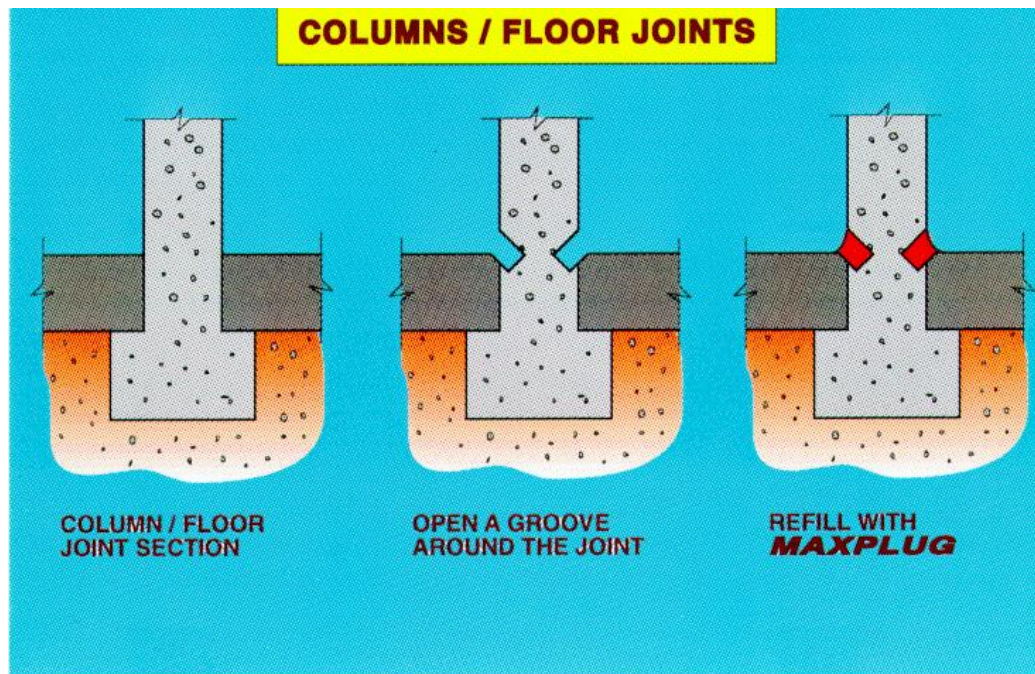

© Scientific Waterproofing Products Pty Ltd. ABN: 155 659 948 All rights reserved.
Address: Unit4/92 Bryant Street, Padstow, NSW 2211, AUSTRALIA
Tel: +61 2 9771 0011 Fax: +61 2 9771 0111
Email: admin@swppl.com.au
National Hotline: 1300 303 301 National Faxline: 1300 369 932
<http://swppl.com.au/>